

	www.basler.com +1 618.654.2341 (USA) info@basler.com	Model AVC63-12 and AVC125-10
		Product Voltage Regulator

Introduction

The AVC63-12 and AVC125-10 regulate the level of excitation supplied to the field of a conventional, brushless, synchronous generator.

Regulation is achieved by sensing the generator output voltage, converting it to a dc signal, and comparing the signal to a reference voltage. An error signal is developed and used to control the dc field power in order to maintain a constant generator output.

Each regulator includes frequency compensation with selectable slope, inverse-time overexcitation shutdown, buildup circuitry, single-phase or three-phase voltage sensing, single-phase or three-phase shunt or permanent magnet generator (PMG) power input, parallel droop compensation, and an accessory input. The accessory input provides compatibility with devices such as var/power factor controllers or excitation limiters.

Model Number and Style Number

Voltage regulator electrical characteristics are defined by a model number and style number. Model and style number selections are illustrated in Figure 1.

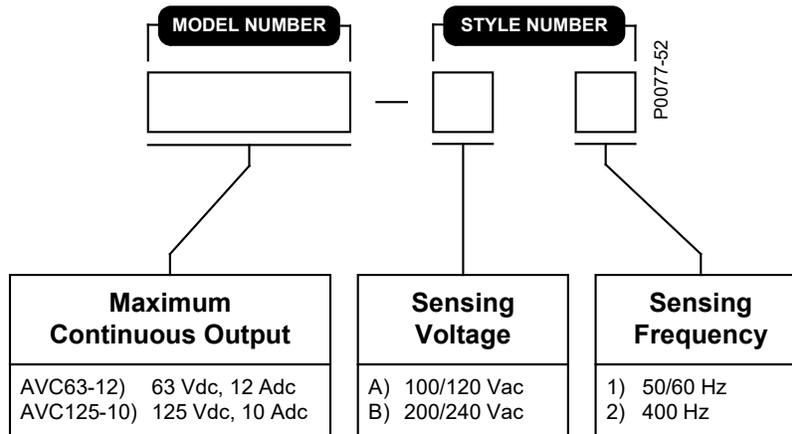


Figure 1. Style Chart

Specifications

Power Input *

Configuration: 1-phase or 3-phase

Frequency: 50 to 400 Hz

Voltage Range

AVC63-12: 90 to 153 Vac

AVC125-10: 180 to 264 Vac

Maximum Continuous Burden

AVC63-12: 1,092 VA

AVC125-10: 1,750 VA

* See *Options* for Inrush Current Reduction Module information.

Sensing Input

Configuration: 1-phase or 3-phase

Burden: <1 VA per phase

Voltage Range

Option A: 90 to 139 Vac

Option B: 180 to 264 Vac

Publication 9337200991	Revision P	Instructions	Date Jun 2025	Page 1 of 12
----------------------------------	----------------------	---------------------	-------------------------	------------------------

Nominal Frequency

Option 1: 50 or 60 Hz

Option 2: 400 Hz

(See Table 2 for style/option information.)

Accessory Input

Voltage Range: ±3 Vdc

Power Output

Maximum Continuous Output

AVC63-12: 12 Adc at 63 Vdc

AVC125-10: 10 Adc at 125 Vdc

10 Second Forcing Output

AVC63-12: 24 Adc at 125 Vdc

AVC125-10: 20 Adc at 250 Vdc

Minimum Field Resistance

AVC63-12: 5.25 Ω

AVC125-10: 12.5 Ω

Regulation Accuracy

±0.5% of voltage setpoint, average response

Voltage Drift

±0.5% variation for a 40°C (104°F) change

Response Time

<4 ms

Frequency Compensation

One or two jumper-selectable V/Hz curves with knee frequency adjustable from 45 to 65 Hz (50/60 Hz units) or 300 to 430 Hz (400 Hz units). Figure 2 illustrates the 60 Hz sensing model and Figure 3 illustrates the 400 Hz sensing model.

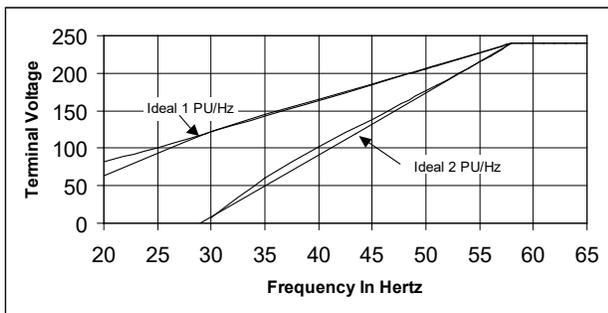


Figure 2. 60 Hz Sensing Model

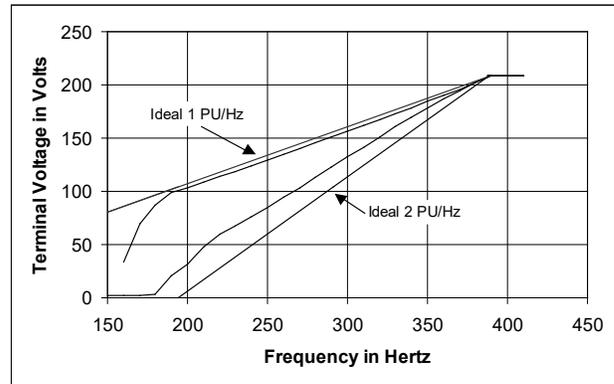


Figure 3. 400 Hz Sensing Model

EMI Suppression

Internal filter. (See *CE Conformity*)

Voltage Buildup

Automatic voltage buildup occurs from residual generator voltage as low as 6 Vac (AVC63-12) or 12 Vac (AVC125-10).

Overexcitation Shutdown

Overexcitation shutdown protection reduces the output voltage to zero in the times shown below for the listed voltages. Other voltages and times are based on the inverse time characteristic curves of Figures 4 and 5

Publication	Revision	<h1>Instructions</h1>	Date	Page
9337200991	P		Jun 2025	2 of 12

AVC63-12

125 Vdc, ±10% in approximately 10 s
210 Vdc, ±10% in approximately 1 s or less

AVC125-10

250 Vdc, ±10% in approximately 10 s
360 Vdc, ±10% in approximately 4 s or less

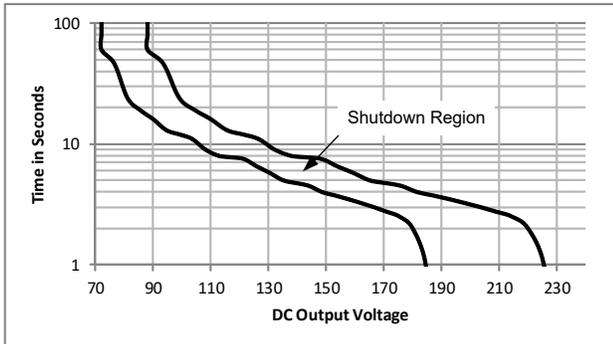


Figure 4. AVC63-12 Overexcitation Shutdown Characteristics

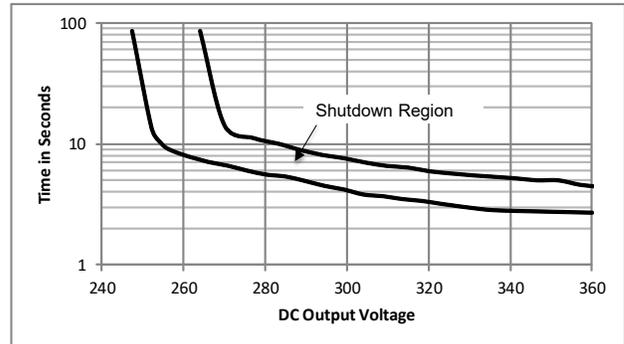


Figure 5. AVC125-10 Overexcitation Shutdown Characteristics

Droop/Line Drop Compensation

<10 VA adjustable from 0 to 10% of rated input current at 0.8 power factor. (LDC compensates only for voltage drop due to line reactance and reactive components of the load current.)

Agency Approvals

UL Recognition

UL 6200, File E97035

CSA Certification

Standard CAN/CSA-C22.2 No. 14-95, File LR 23131

CE and UKCA Compliance

This product has been evaluated and complies with the relevant essential requirements set forth by the EU legislation and UK Parliament.

EC Directives

LVD: 2014/35/EU
 EMC: 2014/30/EU
 RoHS2: 2011/65/EU

Harmonized Standards Used for Evaluation

Safety: EN61010-1
 Radiated and Conducted Emissions: EN50081-2 (EN55011, Class A)
 ESD Immunity: EN50082-2 (4 kV contact, 8 kV air)
 EFT Immunity: EN50082-2 (2 kV contact clamp)
 Magnetic Immunity: EN50082-2 (30 Arms, 50 Hz)
 Radiated Immunity
 Electric Field: EN61000-4-3 (10 V/m)
 Conducted: EN61000-4-6 (10 Vrms)

Publication 9337200991	Revision P	Instructions	Date Jun 2025	Page 3 of 12
----------------------------------	----------------------	---------------------	-------------------------	------------------------

China RoHS

The following table serves as the declaration of hazardous substances for China in accordance with PRC standard SJ/T 11364-2014. The EFUP (Environment Friendly Use Period) for this product is 40 years.

PRODUCT: AVC63-12, AVC125-10										
零件名称 Part Name	有害物质 Hazardous Substances									
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr ⁶⁺)	多溴联苯 Polybrominated Biphenyls (PBB)	多溴二苯醚 Polybrominated Diphenyl Ethers (PBDE)	邻苯二甲 酸二丁酯 Dibutyl Phthalate (DBP)	邻苯二甲 酸丁苄酯 Benzyl butyl phthalate (BBP)	邻苯二甲 酸二酯 Bis(2- ethylhexyl) phthalate (BEHP)	邻苯二甲 酸二异丁 酯 Diisobutyl phthalate (DIBP)
金属零件 Metal parts	X	O	O	O	O	O	O	O	O	O
聚合物 Polymers	O	O	O	O	O	O	O	O	O	O
电子产品 Electronics	X	O	O	O	O	O	O	O	O	O
电缆和互连配 件 Cables & interconnect accessories	O	O	O	O	O	O	O	O	O	O
绝缘材料 Insulation material	O	O	O	O	O	O	O	O	O	O

本表格依据 SJ/T11364 的规定编制。

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

This form was prepared according to the provisions of standard SJ/T11364.

O: Indicates that the hazardous substance content in all homogenous materials of this part is below the limit specified in standard GB/T 26252.

X: Indicates that the hazardous substance content in at least one of the homogenous materials of this part exceeds the limit specified in standard GB/T 26572.

Type Tests

Shock

Withstands 20 G in each of 3 mutually perpendicular planes.

Vibration

Withstands 4.5 G at 18 to 2,000 Hz

Physical

Temperature

Operating: -40 to 70°C (-40 to 158°F)

Storage: -40 to 70°C (-40 to 158°F)

Max. Humidity: 95%, non-condensing

Weight: 1.1 kg (2.5 lb)

Mounting

Regulators are contained in an encapsulated plastic case and may be mounted in any convenient position. A regulator may be mounted directly on a genset using UNC ¼-20 or equivalent hardware. Hardware selection

Publication 9337200991	Revision P	Instructions	Date Jun 2025	Page 4 of 12
----------------------------------	----------------------	---------------------	-------------------------	------------------------

should be based on any expected shipping/transportation and operating conditions. The torque applied to the mounting hardware should not exceed 65 in-lb (7.34 N•m). See Figure 6 for regulator dimensions.


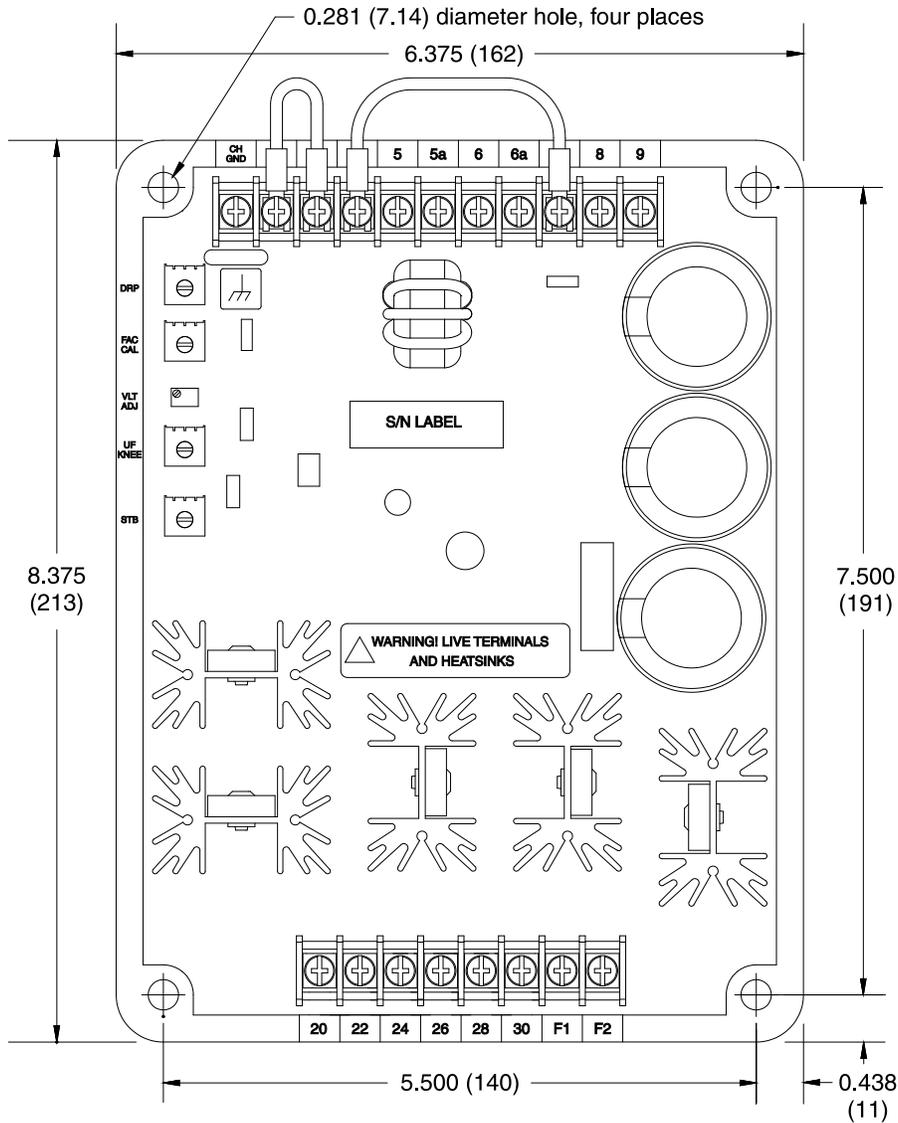


Figure 6. Mounting Dimensions

Connections

Before connecting the voltage regulator into your system, review the connection diagrams of Figures 7 and 8 and the terminal descriptions listed in Table 1.


Publication 9337200991	Revision P	Instructions	Date Jun 2025	Page 5 of 12
----------------------------------	----------------------	---------------------	-------------------------	------------------------

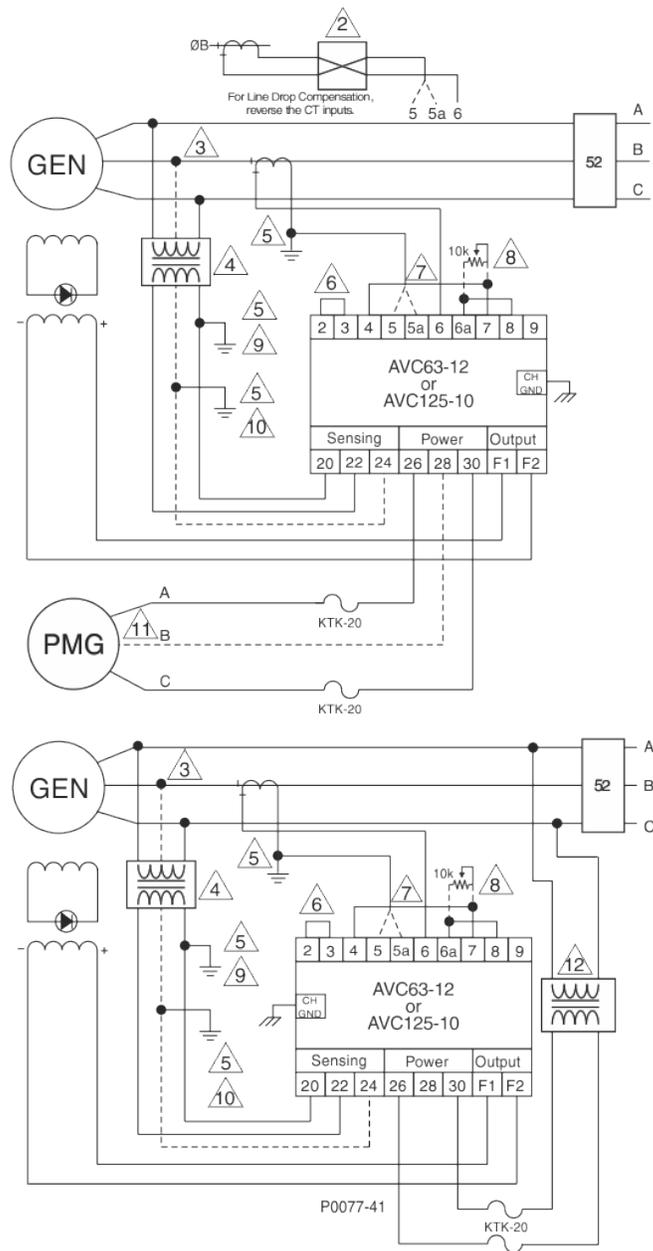

- 1 ABC phase rotation shown.
- 2 LDC compensates for voltage drops due to line reactance and reactive components of the load current only.
- 3 Required for three-phase sensing.
- 4 Step-down sensing transformer required if generator terminal voltage does not match the sensing voltage range identified by the voltage regulator model number.
- 5 The secondary winding of the sensing transformers must be grounded as closely as practical. When multiple transformers are interconnected, ensure that the secondary winding of only one transformer is grounded.
- 6 Terminals 2 and 3 are used with an external biasing device. Short terminals 2 and 3 when external biasing device is not used.
- 7 Connect terminal 5 to 1 Aac CT or connect terminal 5a to 5 Aac CT. Also see note 5.
- 8 For remote voltage adjustment: connect potentiometer across terminals 6a and 7. Remove link across terminals 4 and 7.
For V/Hz: jumper terminals 6a and 8. Remove jumper for 2 PU V/Hz.
Voltage sensing: jumper terminals 6a and 9 for three-phase sensing. Remove jumper for single-phase sensing.
- 9 Ground phase C of the voltage sensing transformer secondary winding when single-phase sensing is used.
- 10 Ground phase B of the voltage sensing transformer secondary winding when three-phase sensing is used.
- 11 Three-phase PMG is shown. For single-phase PMG, omit B-phase connection at terminal 28.
- 12 Power step-down transformer is required if the generator voltage does not match the voltage regulator input power range.

Figure 7. Typical Connections

Publication 9337200991	Revision P	Instructions	Date Jun 2025	Page 6 of 12
----------------------------------	----------------------	---------------------	-------------------------	------------------------

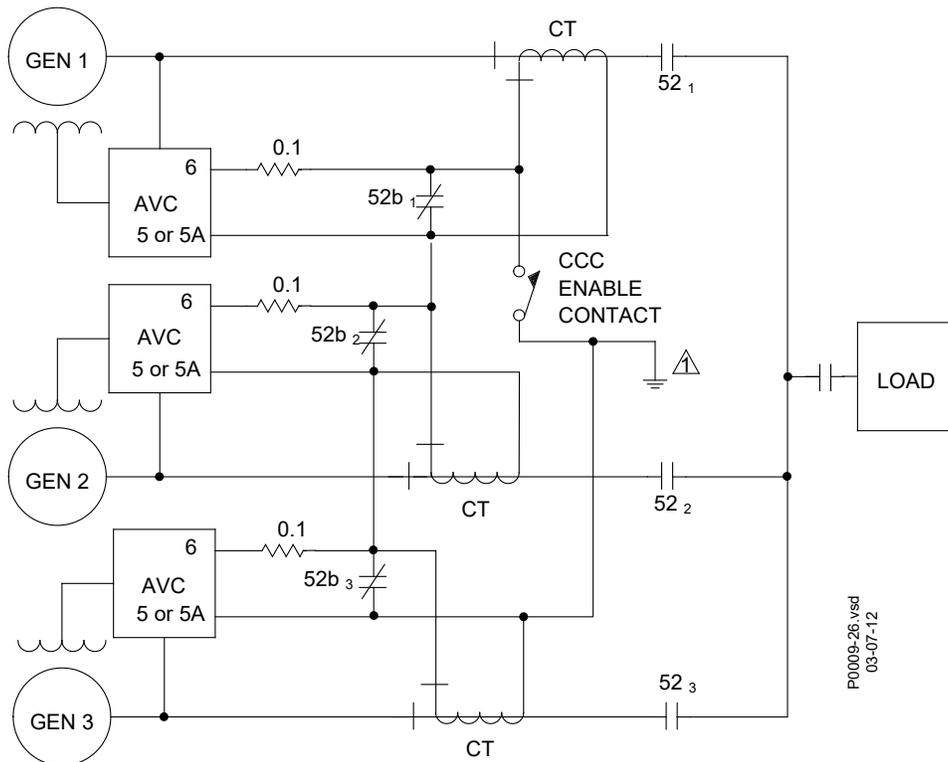

P0009-26.vsd
03-07-12

⚠ The secondary winding of a sensing transformer must be grounded as closely to the transformer as practical. When interconnecting more than one transformer, ensure that the secondary winding of only one transformer is grounded.

Figure 8. Connections for Cross-Current Compensation

Table 1. Terminal Descriptions

	Term #	Description
Upper Terminal Strip	CH GND	Chassis ground connection
	2	Auxiliary input from external biasing device such as var/power factor controller, excitation limiter, or synchronizing/load sharing modules
	3	Auxiliary input from external biasing device such as var/power factor controller, excitation limiter, or synchronizing/load sharing modules
	4	Internal voltage adjust: connect to 7. External voltage adjust: no connection
	5	1 A current transformer (CT)*
	5a	5 A CT*
	6	CT common connection
	6a	Common connection for selectable features
	7	Internal voltage adjust: connect to 4. External voltage adjust: connect to 6a
	9	Connect to 6a to select 3-phase sensing
Lower Term. Strip	Term #	Description
	20	C-phase sensing input
	22	A-phase sensing input
	24	B-phase sensing input
	26	1- or 3-phase power input
	28	3-phase power input
	30	1- or 3-phase power input
	F1	Field + connection
F2	Field - connection	

- * The secondary winding of a sensing transformer must be grounded as closely to the transformer as practical. When interconnecting more than one transformer, ensure that the secondary winding of only one transformer is grounded.

Adjustments

AVC63-12 and AVC125-10 adjustments are described in the following paragraphs.

Field Flashing

When the regulator is operated with the generator for the first time, the residual magnetism may not be of sufficient magnitude or the correct polarity. If the generator residual voltage is less than 6 Vac for the AVC63-12 or 12 Vac for the AVC125-10 at terminals 26, 28 and/or 30, shut down the prime mover and proceed with the following steps.

Caution

Do not flash the field when the generator is in motion. Regulator damage may result.

1. With the prime mover at rest, apply an ungrounded dc source of not more than 24 Vdc to terminals F1 (+) and F2 (–) in series with a limiting resistor. Use 1 Ω of resistance for each volt applied. The power source should have a rating of at least 1 W/ Ω .
EXAMPLE: If using a 24 Vdc source, use a 24 Ω , 24 W resistor.
2. Allow the field to be flashed for approximately 10 seconds before removing the dc source.
3. If voltage buildup does not occur after performing steps 1 and 2, verify the polarity of the dc source and repeat steps 1 and 2.

Frequency Rolloff (UF KNEE)

The underfrequency knee (rolloff) is typically set below the nominal system frequency. When the generator speed falls below the knee setpoint of the regulator, generator voltage is reduced proportionally to the speed of the machine. To adjust the underfrequency knee, perform the following steps.

1. Adjust the generator frequency at the nominal level (50, 60, or 400 Hz).
2. Adjust the UF KNEE control counter-clockwise.
3. Adjust the VLT ADJ control for nominal generator voltage.
4. Adjust the UF KNEE control clockwise until the voltage begins to decrease.
5. Adjust the UF KNEE counter-clockwise until the voltage just returns to the value set in step 3.

The underfrequency knee is now set just below the nominal operating frequency. Further rotation in the counter-clockwise direction will lower the knee frequency setpoint at which underfrequency compensation just begins.

Connecting a jumper from terminal 8 to 6a will provide an underfrequency slope of 1 PU V/Hz. No connection to terminal 8 will result in an underfrequency slope of 2 PU V/Hz. The slope can also be selected on the 400 Hz models. However, the actual V/Hz curve is approximately 1 PU or 2 PU, depending if terminal 8 is jumpered to 6a.

Stability (STB)

An oscilloscope or other voltage recording device should be used in an optimal stability setting is desired. Adjust the stability setting with the generator at no load.

Clockwise rotation of the STB control will slow response time. Counter-clockwise rotation will speed response time. If rotated too far counter-clockwise, the generator voltage may oscillate (hunt).

To obtain good response, rotate the STB control counter-clockwise until the system just begins to oscillate. Then, rotate the control clockwise just past the point where oscillation occurred. Apply various amounts of load to determine proper stability performance.

Voltage (VLT ADJ)

Installation of a jumper across terminals 4 and 7 enables the front-panel VLT ADJ control to vary the generator nominal voltage over the operating range.

To allow operation of an external voltage-adjust control, remove the jumper between terminals 4 and 7 and connect a 10 k Ω , external potentiometer across terminals 6a and 7. The front-panel VLT ADJ control should be

Publication 9337200991	Revision P	<i>Instructions</i>	Date Jun 2025	Page 8 of 12
----------------------------------	----------------------	---------------------	-------------------------	------------------------

set fully clockwise for proper operation of the external adjustment. Note that as the external potentiometer resistance increases, generator voltage also increases.

Factory Calibration (FAC CAL)

Caution

The FAC CAL control is intended for use during factory calibration only. The following procedure can be used if the factory calibration has been disturbed.

1. With the regulator operating on a generator, adjust the FAC CAL control fully counterclockwise and the external voltage adjust control fully clockwise.
2. Adjust the FAC CAL control clockwise until the generator voltage reaches the desired maximum voltage setting. The regulator is calibrated and the FAC CAL control can be sealed.

Parallel Droop Compensation

Variable parallel droop compensation levels can be obtained by adjusting the DRP control. Clockwise rotation increases the amount of droop for a given condition.

Line Drop Compensation

When the sensing input CT connections are reversed to provide line drop compensation, the droop adjustment becomes the line drop compensation adjustment.

Startup

Startup and troubleshooting procedures for the AVC63-12 and AVC125-10 are listed in the following procedure. Symptoms of startup problems stemming from improper regulator adjustments and certain generator system problems that resemble faulty regulation are listed with possible solutions. Simplifying the system by eliminating components, such as remote adjustment potentiometers and other nonessential items, can be helpful in the troubleshooting process. Adjustments, options, and an operational test are included in the paragraphs following the procedure.

1. Ensure that the regulator has been installed in accordance with the *Installation* and *Connections* paragraphs before proceeding with system startup.
2. Start the prime mover and bring it up to rated speed.
If the voltage does not build up:
 - a. Flash the field.
 - b. Remove power for one minute to reset the overexcitation circuit.
3. Slowly adjust the VOLT potentiometer or external, voltage adjust rheostat until the voltage reaches nominal.
If the voltage will not build up to rated:
Check the generator output for a shorted or excessive load.
4. Apply and remove the generator load to check stability.
If the generator response is too slow or is hunting (oscillating):
 - a. Check the generator output for a shorted or excessive load. Adjust the STB potentiometer with no load applied.
 - b. Check stability of the governor.
5. Check regulation under normal operating conditions.
If the regulation is poor:
 - a. Check that the prime mover is up to rated speed.
 - b. Check that the voltmeter is connected at the same point as the regulator sensing.
 - c. Use an average-sensing voltmeter (not an rms-sensing voltmeter).
6. Reduce the generator frequency. The generator output should decrease from this point.
If the generator output voltage does not decrease at the desired frequency:
 - a. Check that all wiring is in accordance with the connection diagrams provided in this instruction sheet.

Publication	Revision	Instructions	Date	Page
9337200991	P		Jun 2025	9 of 12

- b. Adjust the UF KNEE control.

Options

The AVC63-12 and AVC125-10 may be equipped with the following options to enhance operation.

Remote Voltage Adjust

Connect a 10 k Ω , 2 W potentiometer across terminals 6a and 7, remove the jumper from terminals 4 and 7, and adjust the front panel VLT ADJ control fully clockwise to enable remote adjustment of the voltage setpoint.

Inrush Current Reduction Module

A Basler ICRM-15 is required when energizing the AVC63-12 or AVC125-10 from a source that is already at the regulator input power rating. The ICRM-15 minimizes the amount of inrush current that could be seen when power is applied.

Excitation Disable

This option disables excitation by removing power from the regulator. A switch removing voltage from terminals 26, 28 and/or 30 will remove regulator power.

Excitation Limiter

The Basler EL 200 provides an initial, fast-acting limit of the field current at a user-defined level. Once the field current has changed to the selected level, the EL 200 provides a signal to the regulator to change the excitation level.

External Bias Control

The accessory input enables adjustment of the regulation setpoint through application of a bias signal from an external device. Any external device that provides a bias signal within the range of ± 3 Vdc may be used. Examples of external biasing devices include var/power factor controllers, excitation limiters, and synchronizing/load sharing modules. When the AVC receives a positive voltage (terminal 2 positive, terminal 3 negative) at the accessory input, the regulation setpoint decreases. A negative voltage (terminal 2 negative, terminal 3 positive) at the accessory input increases the regulation setpoint. Figure 9 illustrates interconnection of the AVC accessory input with an SCP 250 Var/Power Factor Controller and an EL 200 Minimum/Maximum Excitation Limiter. When using an external biasing device, ensure that it is configured properly for use with the AVC63-12 or AVC125-10.

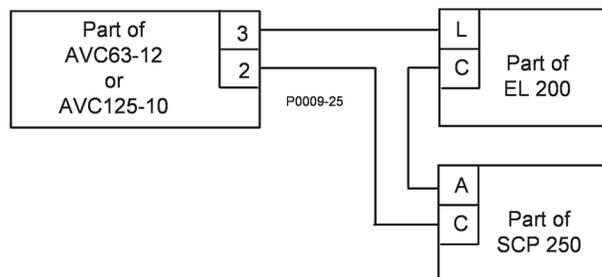


Figure 9. Interconnection with EL 200 and SCP 250

Current Boost System

With the CBS 212A option, if the generator output voltage decreases below the preset operating point due to a short or large motor starting, the CBS 212A provides full current boost to the generator exciter until the voltage returns to a level just above the operating point.

Manual Voltage Control

The Basler MVC-112 provides a method for manually controlling the generator output during generator startup and commissioning or in the unlikely event of a regulator failure. Model MVC-112 is suitable for use with either the AVC63-12 or AVC125-10 voltage regulator.

Operational Test

This test verifies AVC63-12 and AVC125-10 operation. Table 2 lists each regulator model and the corresponding test voltage and frequency.

To test regulator operation, perform the following steps.


Publication	Revision	<i>Instructions</i>		Date	Page
9337200991	P			Jun 2025	10 of 12

1. Connect the regulator according to Figure 10 and apply the appropriate voltages.
2. Adjust the VLT ADJ control fully counter-clockwise. Observe that the lamp is off.
3. Adjust the VLT ADJ control clockwise. Observe that the lamp turns on.
4. Adjust the VLT ADJ control until the lamp just turns off.

Table 2. Test Voltage and Frequency

Model	Input		
	Input Power (Vac)	Sensing	
		Vac	Hz
AVC63-12A1	120	120	50/60
AVC63-12A2	120	120	400
AVC63-12B1	120	240	50/60
AVC63-12B2	120	240	400
AVC125-10A1	240	120	50/60
AVC125-10A2	240	120	400
AVC125-10B1	240	240	50/60
AVC125-10B2	240	240	400

Regulator operation is satisfactory if the above results are obtained. However, stability must be tested with the generator and regulator in operation.

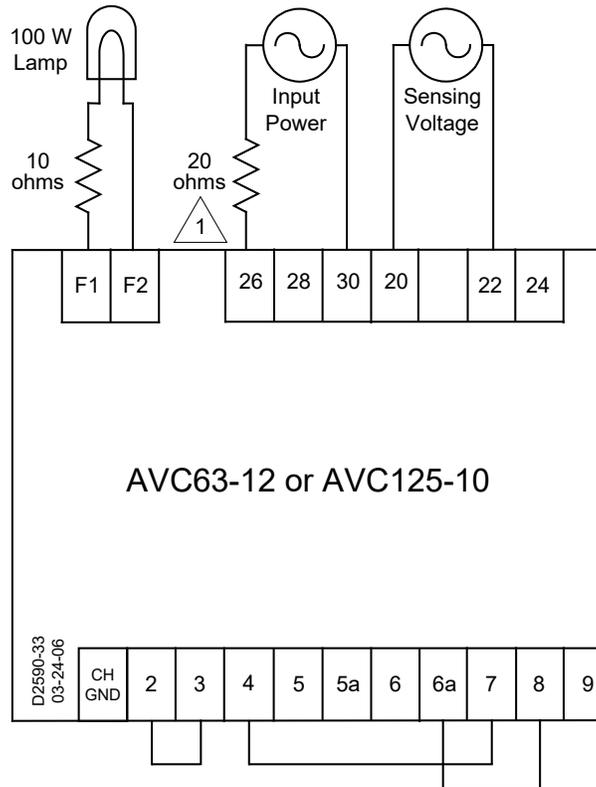

1 A wire-wound resistor with a minimum power rating of 15 W should be used.

Figure 10. Test Setup

Maintenance

A periodic inspection of the regulator should be made to ensure that it is clean and free from accumulations of dust and moisture. Ensure that all connections are clean and tight.

Publication 9337200991	Revision P	Instructions	Date Jun 2025	Page 11 of 12
----------------------------------	----------------------	---------------------	-------------------------	-------------------------

Troubleshooting

In case of regulator failure or defective operation, simplifying the system by eliminating components such as remote adjust potentiometers and other non-essential items can be helpful in the troubleshooting process.

Publication 9337200991	Revision P	<i>Instructions</i>	Date Jun 2025	Page 12 of 12
----------------------------------	----------------------	----------------------------	-------------------------	-------------------------