

	www.basler.com +1 618.654.2341 (USA) info@basler.com	Model	ESD 201
		Part Number	9110600101

INTRODUCTION

The Energy Storage Device (ESD 201) is used where a station battery source is not available to provide circuit breaker trip power. The ESD 201 converts ac bus voltage to dc and stores enough energy to trip a circuit breaker one time for up to 72 hours after ac power has been interrupted.

Warning!

To prevent personal injury or equipment damage, only qualified technicians or operators should install, operate, or service this device.

Caution

The ESD 201 is not a power supply and can be damaged by continuous current draw on the output.

Note

The ESD 201 is shipped from the factory with its rechargeable batteries in a discharged state.

SPECIFICATIONS

Output Power

330 to 430 Vdc
 27 joules minimum at 330 Vdc
 36 joules minimum at 380 Vdc
 46 joules minimum at 430 Vdc

This output is maintained for 72 hours after the internal batteries are fully charged.

Power Input

Operating Range: 120 or 240 Vac, $\pm 10\%$, single-phase, 50/60 Hz
 Burden: 10 VA maximum

Charging Rate

Varies nonlinearly from 90 volts/cycle down to 2.8 volts minimum as capacitor approaches 90% full charge after breaker trip event.

Power Dissipation

2.0 W maximum, continuous

Vibration

Withstands 2 G at 10 to 200 Hz in each of three mutually perpendicular axes.

Shock

Withstands 15 G in each of three mutually perpendicular axes.

Agency Certification/Recognition

Meets CSA C22.2, Number 14, *Industrial Control Equipment*.
 Meets UL 508, *Industrial Control Equipment* as tested by CSA NRTL.

Publication	Revision	<h1>Instructions</h1>	Date	Copyright
9110600991	J		05/25	2025

China RoHS

The following table serves as the declaration of hazardous substances for China in accordance with PRC standard SJ/T 11364-2014. The EFUP (Environment Friendly Use Period) for this product is 40 years.

PRODUCT: ESD 201										
零件名称 Part Name	有害物质 Hazardous Substances									
	铅 Lead (Pb)	汞 Mercury (Hg)	镉 Cadmium (Cd)	六价铬 Hexavalent Chromium (Cr ⁶⁺)	多溴联苯 Polybrominated Biphenyls (PBB)	多溴二苯醚 Polybrominated Diphenyl Ethers (PBDE)	邻苯二甲 酸二丁酯 Dibutyl Phthalate (DBP)	邻苯二甲 酸丁苄酯 Benzyl butyl phthalate (BBP)	邻苯二甲酸 二酯 Bis(2- ethylhexyl) phthalate (BEHP)	邻苯二甲 酸二异丁 酯 Diisobutyl phthalate (DIBP)
金属零件 Metal parts	X	O	O	O	O	O	O	O	O	O
聚合物 Polymers	O	O	O	O	O	O	O	O	O	O
电子产品 Electronics	X	O	O	O	O	O	O	O	O	O
电缆和互连配 件 Cables & interconnect accessories	O	O	O	O	O	O	O	O	O	O
绝缘材料 Insulation material	O	O	O	O	O	O	O	O	O	O

本表格依据 SJ/T11364 的规定编制。

O: 表示该有害物质在该部件所有均质材料中的含量均在 GB/T 26572 规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 规定的限量要求。

This form was prepared according to the provisions of standard SJ/T11364.

O: Indicates that the hazardous substance content in all homogenous materials of this part is below the limit specified in standard GB/T 26252.

X: Indicates that the hazardous substance content in at least one of the homogenous materials of this part exceeds the limit specified in standard GB/T 26572.

Temperature

Operating: -25°C to 65°C (-13°F to 149°F)

Storage: -40°C to 85°C (-40°F to 185°F)

Physical

Dimensions: See Figure 1.

Weight: 590 g (1.3 lb.)

THEORY OF OPERATION

ESD 201 operation is illustrated in Figure 2. Power input to the ESD 201 is 120 or 240 Vac. This input is rectified and used to charge the output capacitor (C1) to approximately 330 Vdc. As long as the ac input is applied, C1 continues to be charged in this manner. However, the failure of the ac input is what the ESD 201 is designed to protect against. Therefore, when the ac input fails, a battery powered oscillator circuit and an associated step-up transformer act as the C1 charging source. (The ESD 201 can be interconnected to the system so that the oscillator circuits function only when the breaker being controlled is closed. See Figure 3.) A battery charger charges the batteries as long as the ac input is applied to the ESD 201.

CONTROLS AND INDICATORS

The pushbutton and LED indicator are used to determine if the ESD 201 is operationally ready. When the button is pushed, the LED lights if the capacitor has the minimum charge of 180 Vdc required to trip the breaker. The pushbutton and LED do not indicate whether the ac input is being applied.

Publication 9110600991	Revision J	<h1>Instructions</h1>	Date 05/25	Page 2 of 6
----------------------------------	----------------------	-----------------------	----------------------	-----------------------

Note

The test circuit acts as a discharge path to the output capacitor. Therefore, the pushbutton should be depressed only long enough to observe if the LED lights.

INSTALLATION

ESD 201 mounting dimensions are illustrated in Figure 1. Dimensions are shown in inches with millimeters in parenthesis.

Connect the ESD 201 as shown in Figure 3. ESD 201 terminals accept a maximum wire size of 12 AWG. The torque applied to the terminal screws should not exceed 9 in-lb (1 N•m).

In order for the ESD 201 internal, battery-operated, capacitor-charging circuits to operate, terminal 1 must be connected to terminal 4. This can be accomplished by permanently jumpering the two terminals together. Using this approach however, the oscillator circuits will continually be in operation if the battery is in place. This will result in premature discharge of the battery if ac input power is not being applied. An alternate (and preferable) approach involves the use of the breaker auxiliary “a” contact. The intent of the “a” contact is to inhibit operation of the oscillator circuit (and thereby eliminate battery drain) until the circuit breaker is closed.

Each breaker should be equipped with its own ESD 201. The use of a single ESD 201 to provide a tripping output for more than one breaker (or other device) is not recommended. Such configurations should be considered only when it can be demonstrated, through independent testing, that combinations of breakers (or devices) can be reliably operated from a single ESD 201.

OPERATION

When the ESD 201 is properly interconnected and 120 or 240 Vac input power is applied, the unit is ready for operation. This can be verified by using the pushbutton as described in the *Controls and Indicators* paragraph. No adjustments of any type should be necessary.

AC power must be applied continually for a minimum of two hours before the ESD 201 is capable of developing full charge on the output capacitor with a sustained interruption in ac input.

If the batteries are fully discharged (terminal voltage of 3.6 volts or less), it will take approximately 48 hours to recharge the batteries from the ac source. In such situations, it is suggested that the batteries be removed and recharged with a high rate charger (not to exceed a 0.1-ampere charging rate). During this time, rechargeable NiCd “AA” size cells (Basler Electric P/N 31129) should be substituted in the ESD 201.

Note

Read the paragraphs under *Discharging* before changing batteries.

DISCHARGING

Since more than 400 Vdc can be present on the ESD 201 output terminals, the storage capacitors should be discharged before working on the unit. The following procedure can be used for discharging the storage capacitors.

Warning!

Lethal voltage may be present at ESD 201 terminals and within the ESD 201. Only qualified persons should install, operate, or service this device.

1. Connect a few inches of 14 AWG, 600 V insulated wire to each end of a 470 Ω , 5 W, wire-wound resistor.
2. Remove ac input power from ESD 201 terminals 1, 5, and 2.
3. To discharge the capacitors, carefully touch one of the resistor wires to terminal 1 and the other wire to terminal 3. Hold the wires on the terminals for at least five seconds.
4. Ensure that the capacitors are discharged by connecting a dc voltmeter across terminals 3 (+) and 1 (-).

Publication 9110600991	Revision J	Instructions	Date 05/25	Page 3 of 6
----------------------------------	----------------------	---------------------	----------------------	-----------------------

STORAGE

This device contains long-life aluminum electrolytic capacitors. For devices that are not in service (spares in storage), the life of these capacitors can be maximized by energizing the device for 30 minutes once per year.

REPAIRS

The ESD 201 is not field repairable. Should the device require repairs, return it to Basler Electric for service.

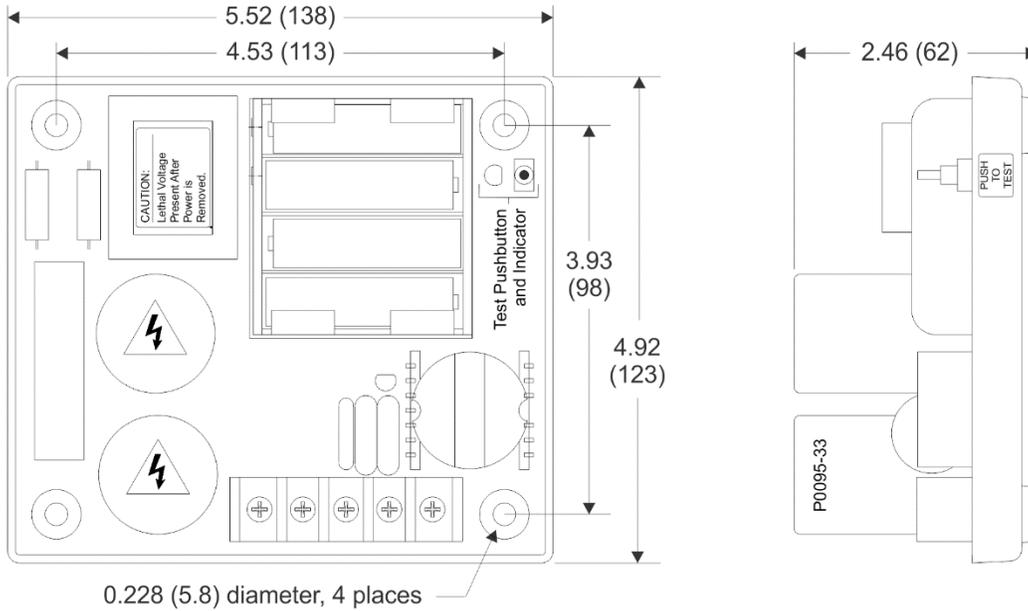


Figure 1. Mounting Dimensions


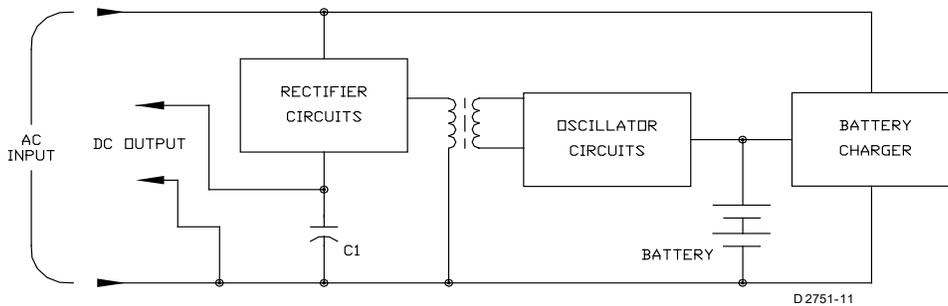


Figure 2. Function Block Diagram

Publication 9110600991	Revision J	Instructions	Date 05/25	Page 4 of 6
----------------------------------	----------------------	---------------------	----------------------	-----------------------

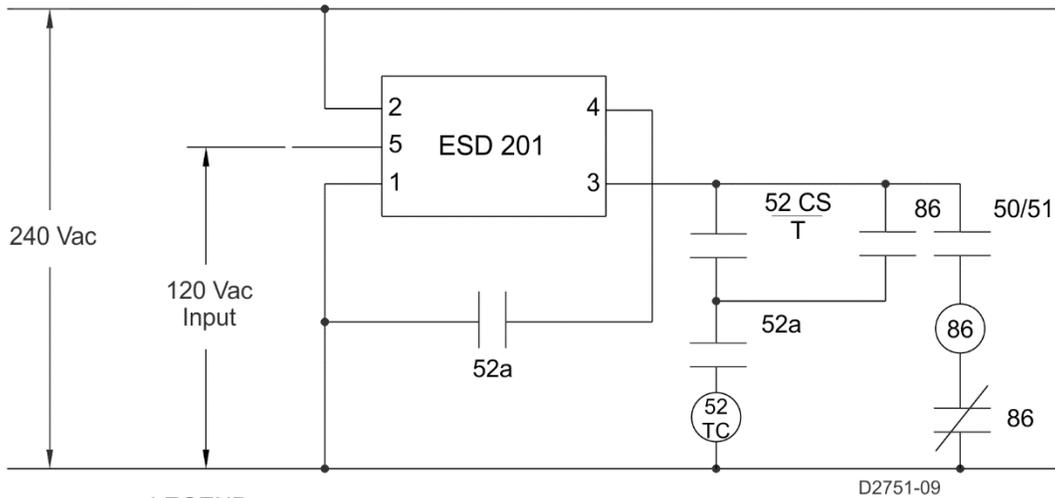

LEGEND

- | | | | |
|----|---------------------------|-------|----------------------|
| 52 | Power circuit breaker | 86 | Lockout relay |
| a | Breaker auxiliary contact | 50/51 | Overcurrent relay |
| TC | Breaker trip coil | CS/T | Control switch, trip |

Figure 3. Interconnection Diagram



Publication 9110600991	Revision J	<i>Instructions</i>	Date 05/25	Page 6 of 6
----------------------------------	----------------------	----------------------------	----------------------	-----------------------

For terms of service relating to this product and software, see the *Commercial Terms of Products and Services* document available at www.basler.com/terms.